


Swiftreader X - postal lock assembly for surface - overview

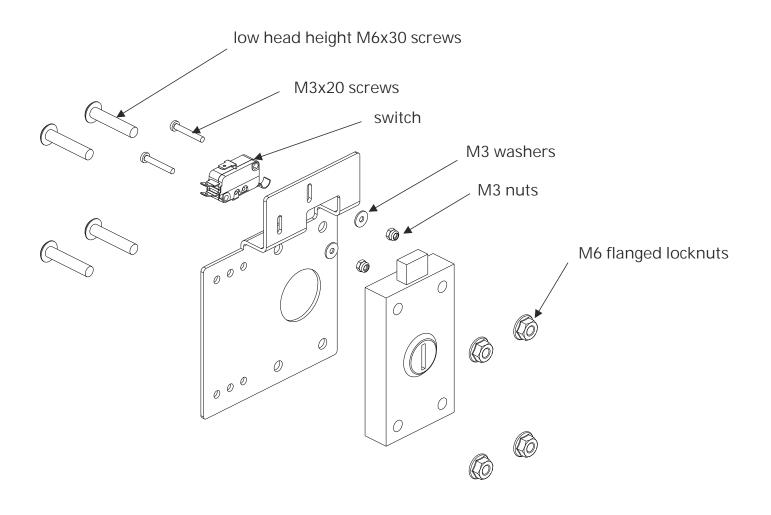


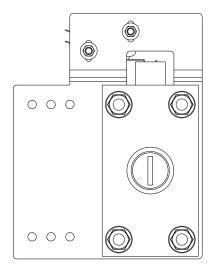





Swiftreader X - postal lock assembly adjustment

Vertical position of the switch should be adjusted and nuts tightened before the assembly is fixed on the finishing plate

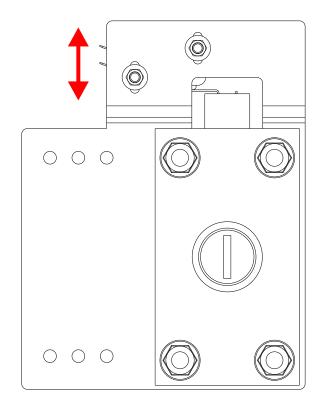

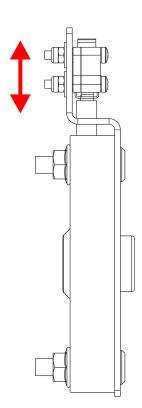


Swiftreader X - postal lock assembly installation

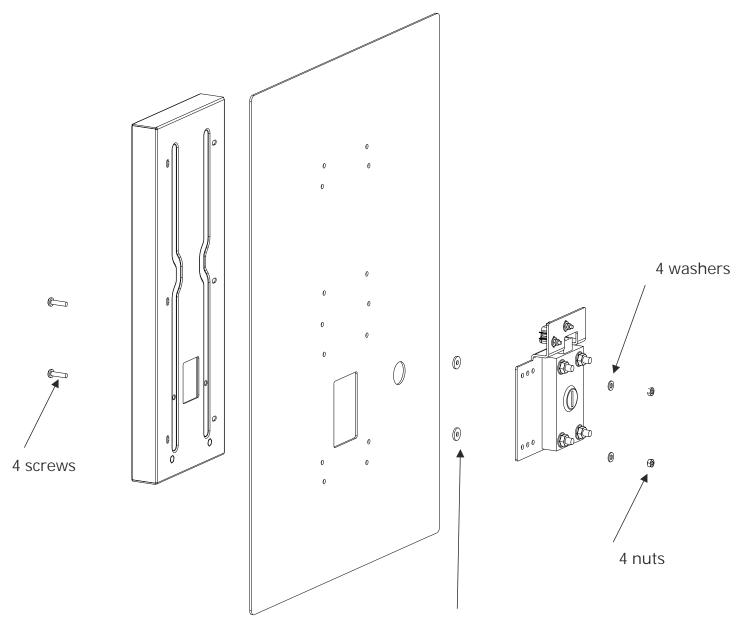


large diameter washers
used to adjust the distance of the cylinder's face
from the face of the finishing plate
we try to keep a small distance
more than one per location can be used if required


Swiftreader X - postal lock assembly installation

Fixation screws should be inside the surface back cover - visible screws on the finishing plate should be avoided

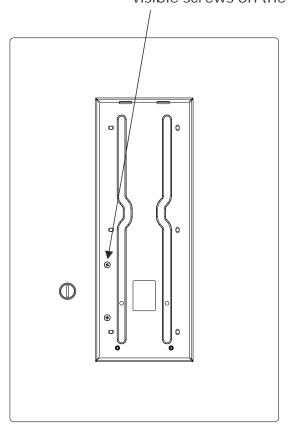

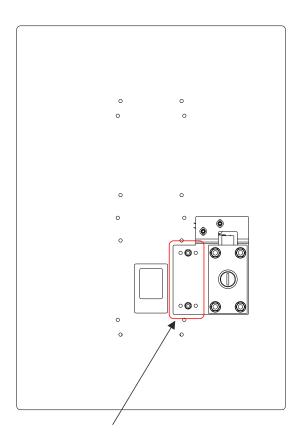

New holes may have to be drilled in this area depending on the location of the postal lock assembly

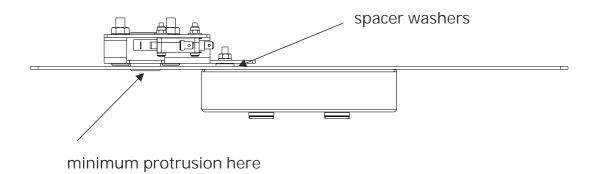

See all installation manuals:

https://www.swiftlane.com/swiftlane-installation-manual/

Scan QR code to visit all installation manuals





Support